




MAC Usage Help

- ① Connect the recorder to the computer and open the [USB DISK] (▲Please turn off the recorder before connecting to the computer)

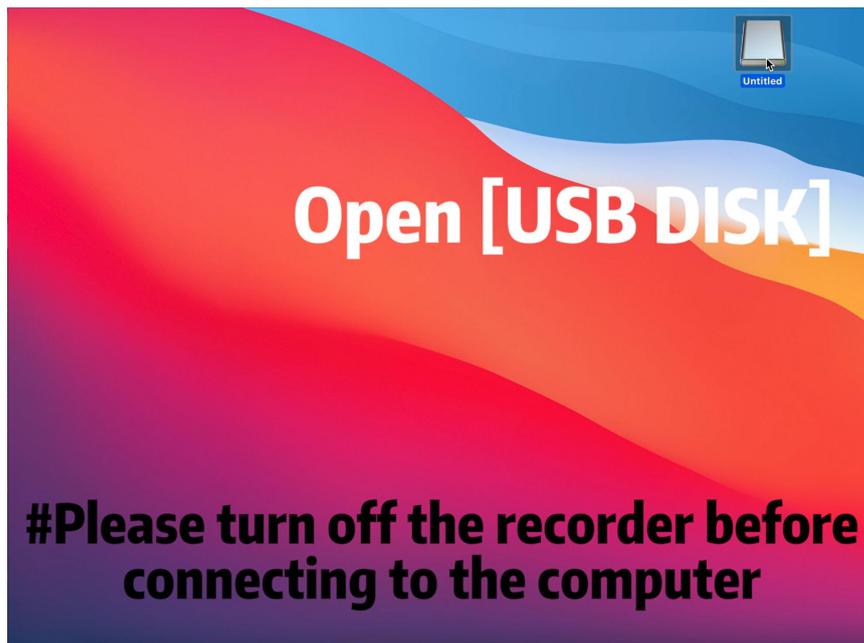


- ② Copy the [RECSET] to the desktop, then open

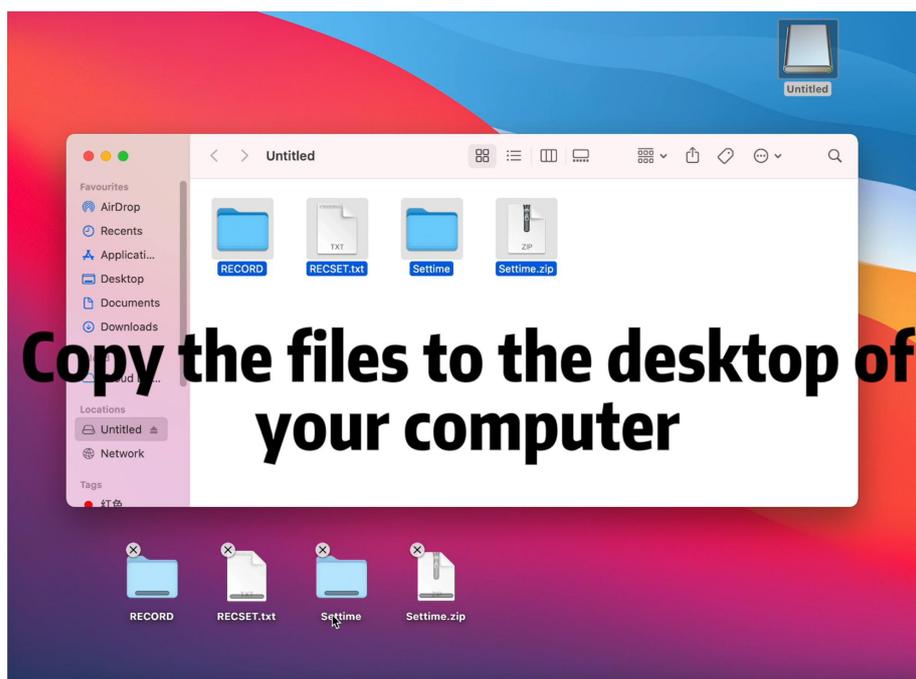

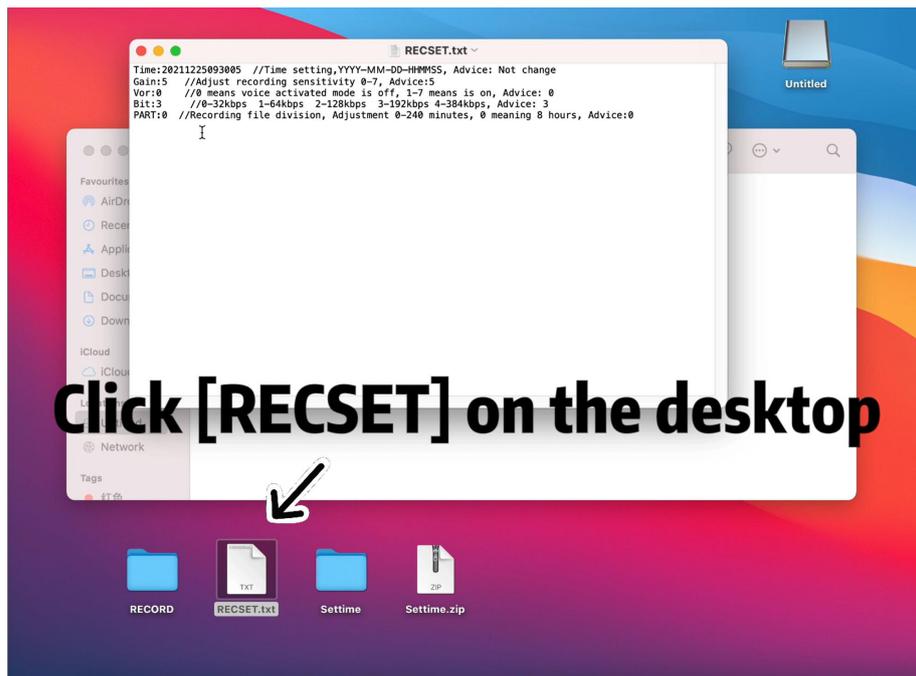


③ "Vor" means voice activated setting; 1-7 means voice activated is on

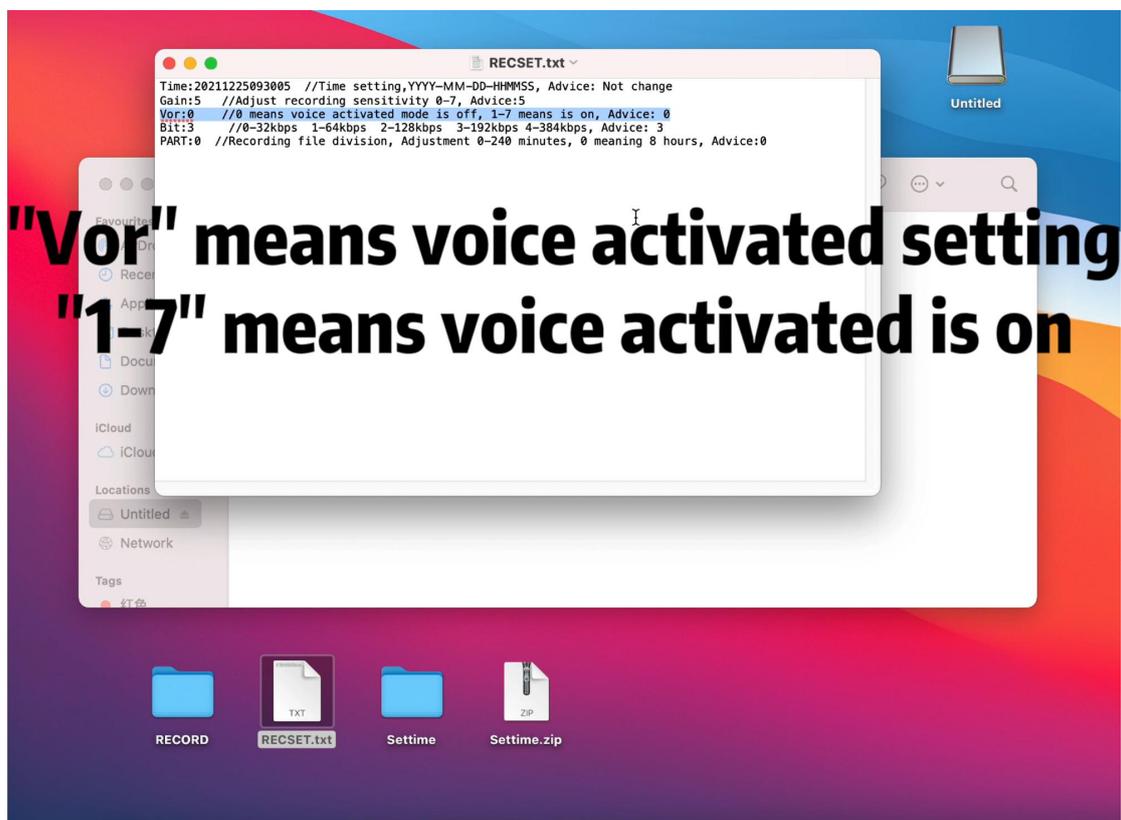


④ Select the area to be changed, then change.



Advice: 1 or 2

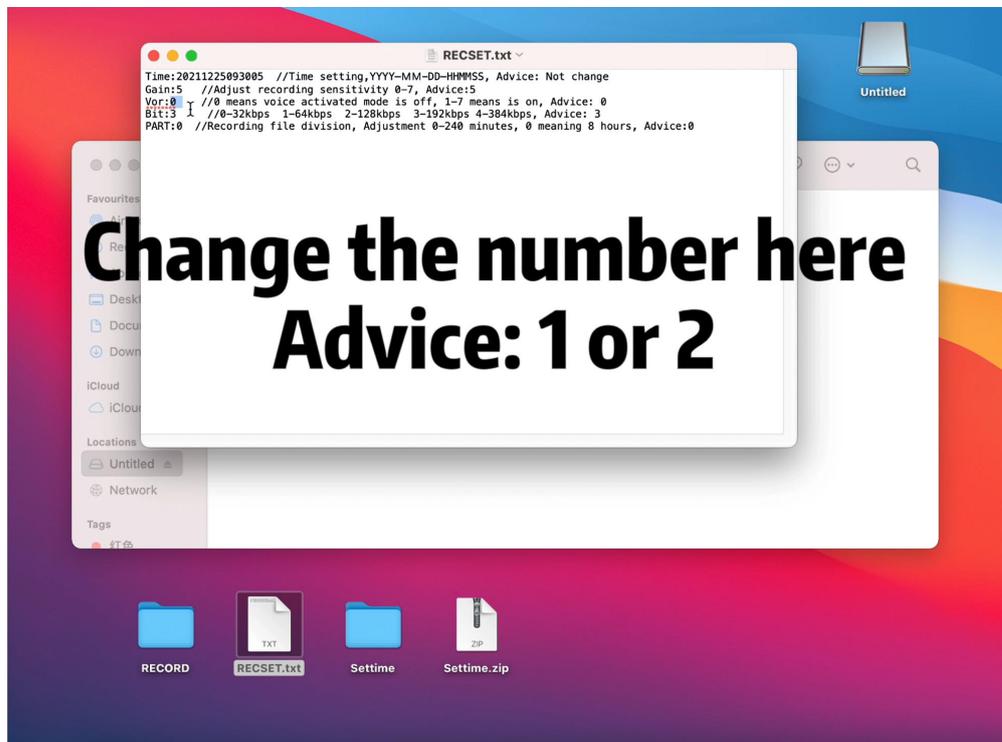


⑤ Modification completed ✓ → Tap [Command+S] to save

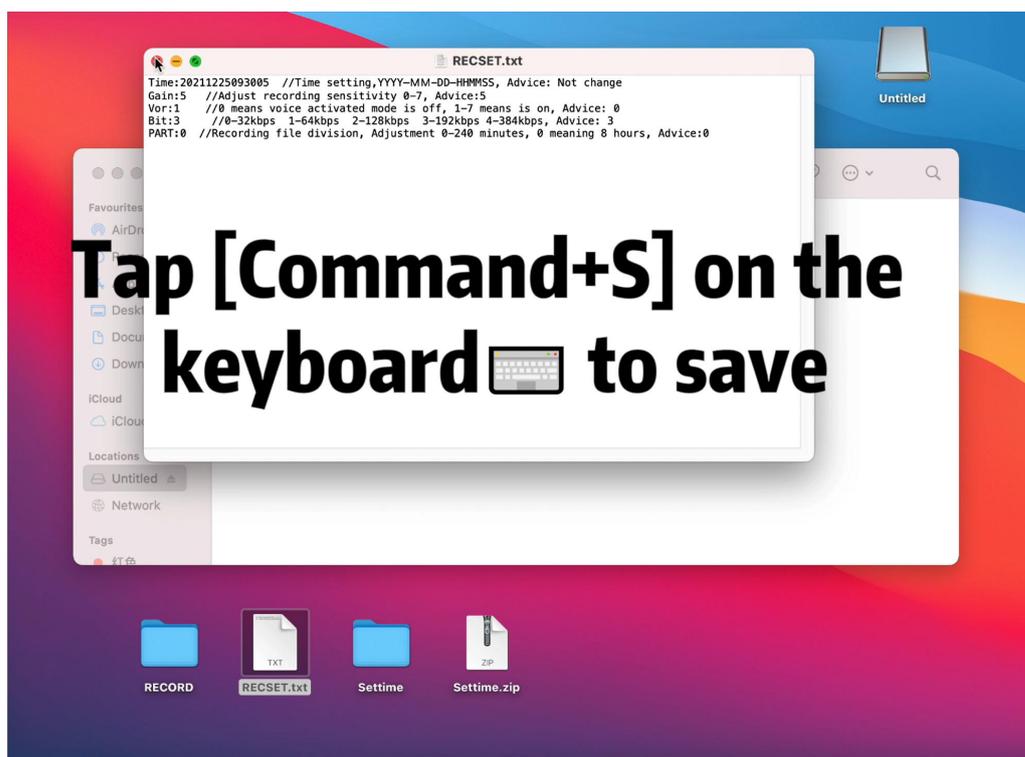


- ⑥ ▶ Delete the [RECSET] on the [USB DISK]
- ▶ Move the [RECSET] on the desktop to the [USB DISK]
- ▶ Setup complete ✓

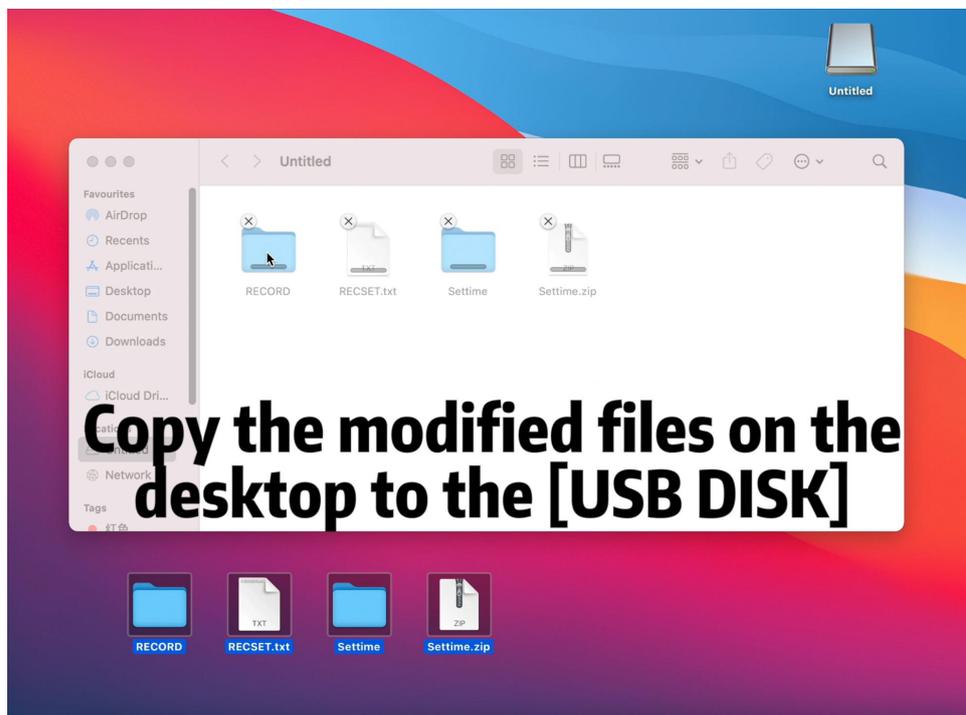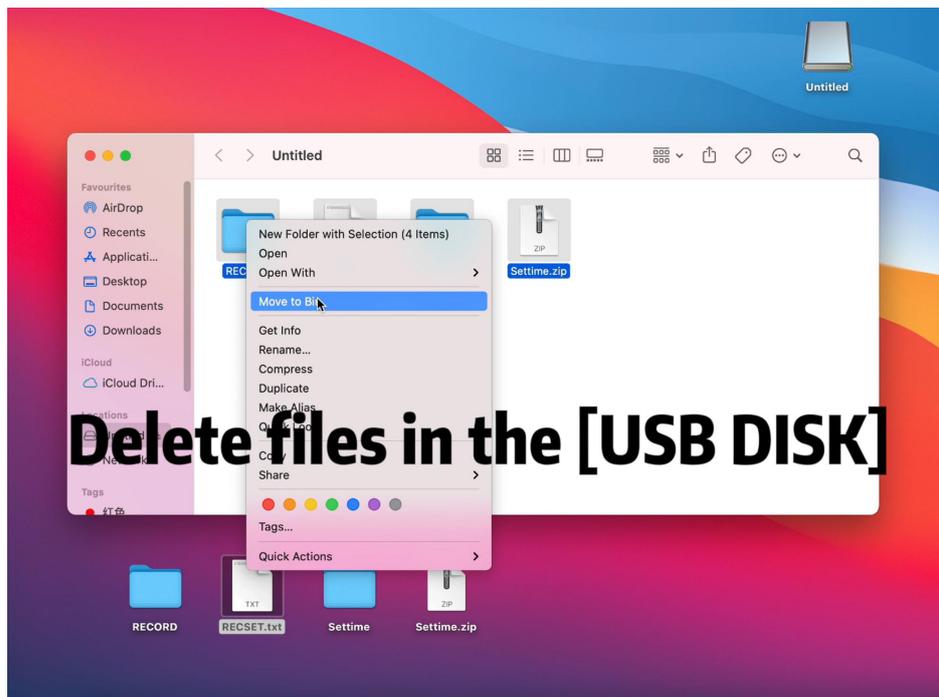

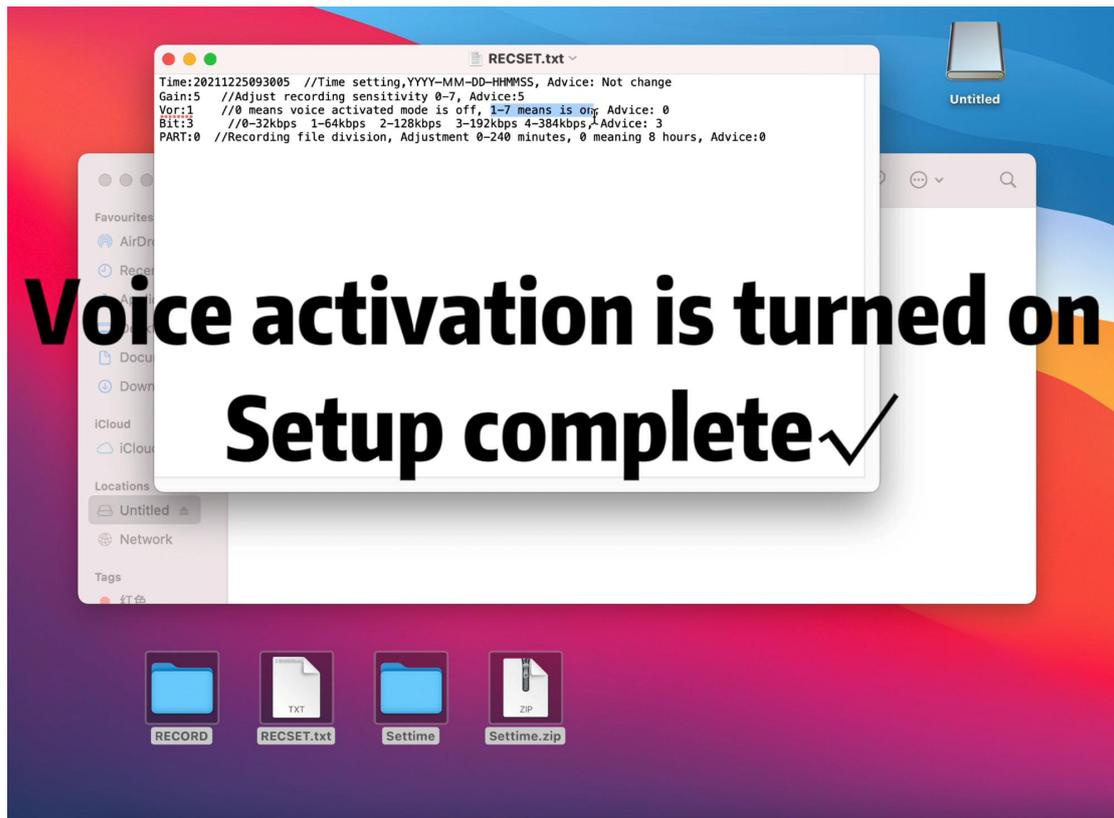

⑦ How to check the voice activation?

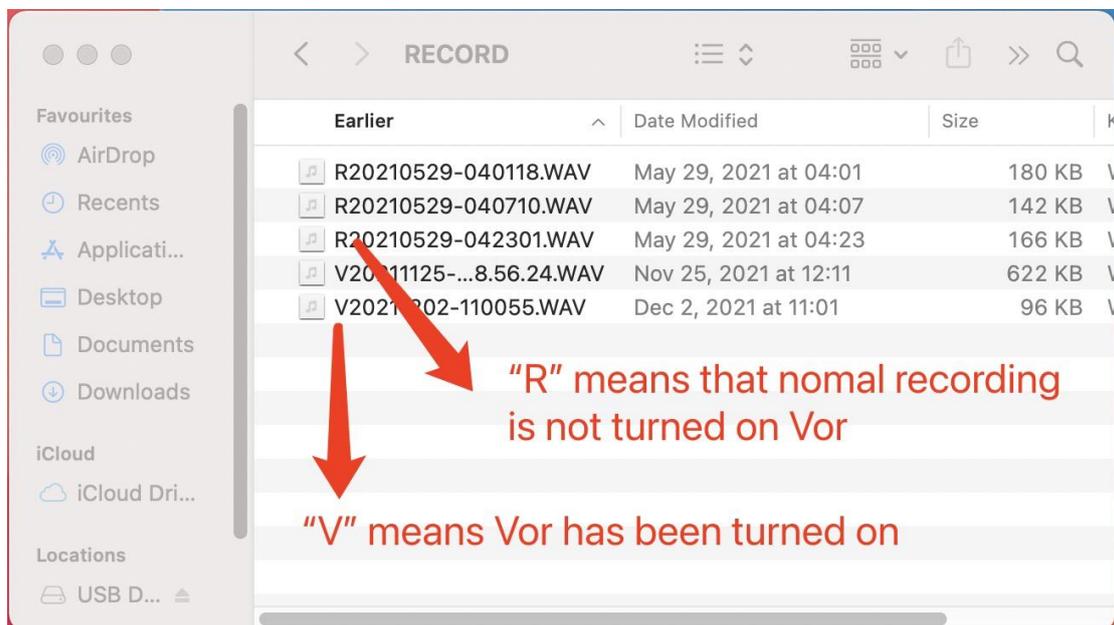

After completing the setting, Recording again after disconnecting the computer, if the recording file n

ame "V" begins, indicating that the voice activation has been set up.

Note: Please do not connect to the computer to record. In the case of connected computers, no matter which state is not recording, because the recorder chip to protect the memory, to prevent connected computers to recorders for continuous reading and writing affect memory.

If there is any problem with the use of the product, please send a message to let us know and we will solve it for you immediately.

「Account Service」 → 「Order History」 → 「Seller」
→ 「Ask Question」